

# Instructions for Installing SOSS® #218PT, #418PT, #418SSPT and #220PT, #220ASPT and #220SSPT Power Transfer Hinges

All SOSS® Invisible Hinges are packaged with detailed instructions and paper router guide template. You may also use the SOSS® Wooden Router Guide Template #218IT or #220IT for the appropriate hinge. (Recommended). The SOSS® #218PT, #418PT and #418SSPT are for use in wood or metal doors that are 1-3/4" (44.45 mm) thick. The SOSS® #220PT, #220SSPT and #220ASPT are for use in wood or metal doors that are 2" (50.8 mm) thick or thicker. Both hinge models are supplied with 48" (121.9 cm) of wire on one side and 12" (30.5 cm) of wire on the other side. The maximum amperage for SOSS Invisible Power Transfer Hinges is 2.5 amps @ 24VDC.

## IMPORTANT


SOSS® POWER TRANSFER HINGES are for use with 4 or 6 wire applications.

Prep your doors and frames for SOSS® Invisible Hinges as directed in the attached Instruction Sheet. The SOSS® Power Transfer Hinges must be used in conjunction with SOSS® Invisible Hinges.

Maximum load for #218, #418 and #220 Series Power Transfer Hinges – 35 lbs./16 kg.

**CAUTION:** Do not connect these wires to wires that are larger than 18 AWG gauge.

An access hole for the wires must be drilled from the hinge mortise closest to the middle of the door, depending upon the number of SOSS® Invisible Hinges needed for the application to the access door for the door mechanism. See diagram below.

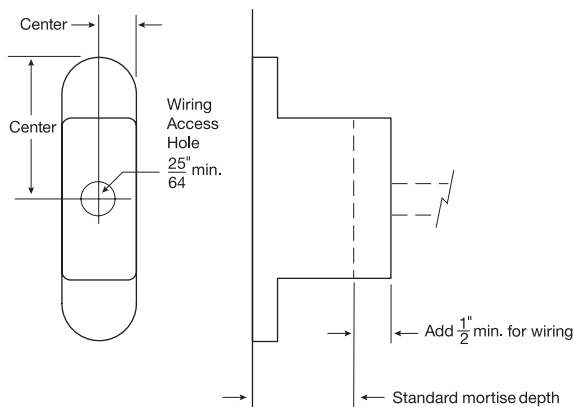

It is best to install the SOSS® Power Transfer Hinge while the door is upright, in a vertical position, opened to 90° or more for easier access.

Extract interior wiring through the prep holes from door and jamb.

Install top and bottom SOSS® Invisible Hinges to support the door on the frame.


When installing the SOSS® Power Transfer Hinge, follow wiring instructions/diagrams provided by Electronic Device manufacturer.

Terminate wire connections with appropriate crimp splices or wire nuts. Note: It is helpful to stagger wire terminations; this allows for easier insertion of wires through prep holes.

**Do not hang SOSS® Power Transfer Hinge by wires during installation, serious damage could occur.**

Insulate all ends of unused wires.

After all wire terminations are completed, carefully slide wires through prep hole making sure that wires are placed so they will not be cut or pinched as hinge is installed.

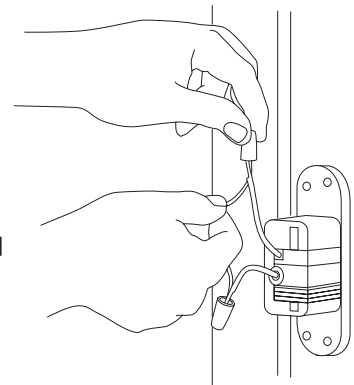

## IMPORTANT

**Wire Gauge Size: 24 and 26 AWG (For #218, #418 and 220 Series Power Transfer Hinges)**

- 1 For devices requiring more than 2.5 AMP, do not use SOSS® Power Transfer Hinge.
- 2 Make sure that same colored wires are connected properly on both sides of hinge.

**CAUTION:** Do not connect these wires to wires that are larger than 18 AWG gauge wires.

SECURITY EQUIPMENT  
UL 218PT / 220PT  
9596U Installation Instructions  
POWER TRANSFER HINGE  
LISTED S25098

**SOSS®**  
Door Hardware

Universal Industrial Products, Inc.  
One Coreway Drive, Pioneer, OH, USA 43554-0628  
Phone: (419) 737-2324 (800) 922-6957, FAX: (419) 737-2130  
Email: hinges@sooss.com Internet: www.soss.com